

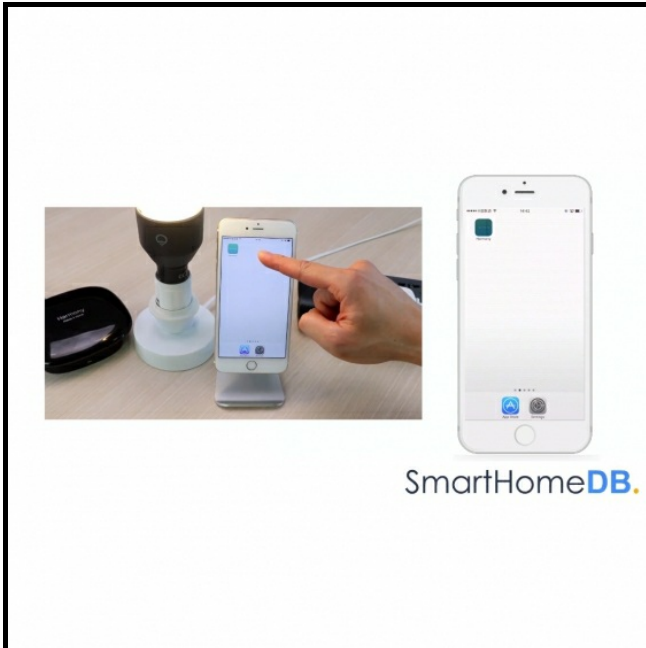


## Step 1

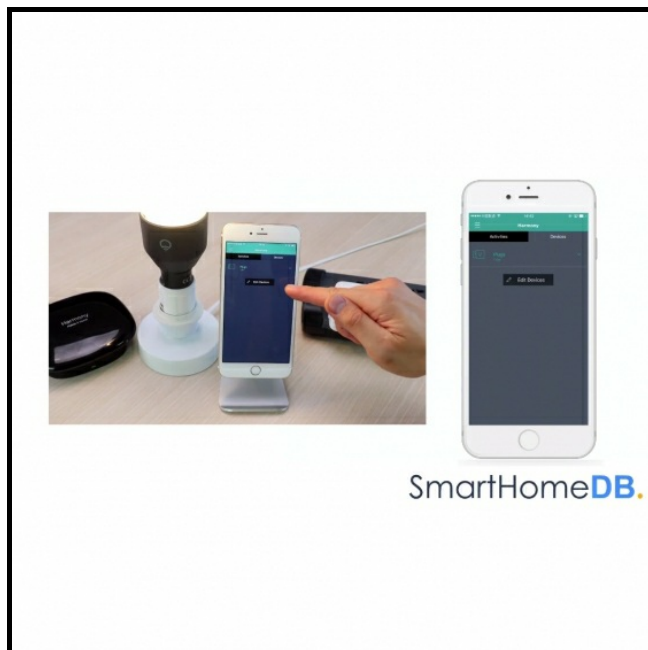


- Open the Harmony App on your mobile device.

## Step 2

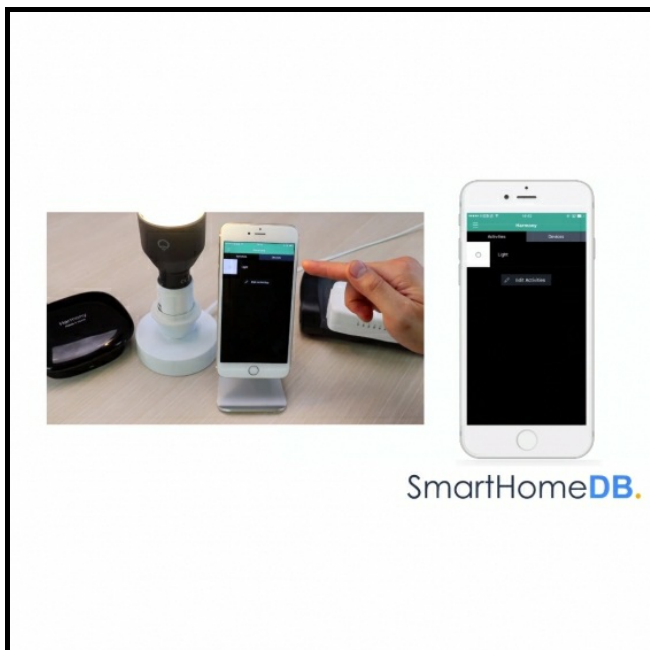



- Tap on 'Devices'.
- Tap on 'Edit Devices'.

### Step 3

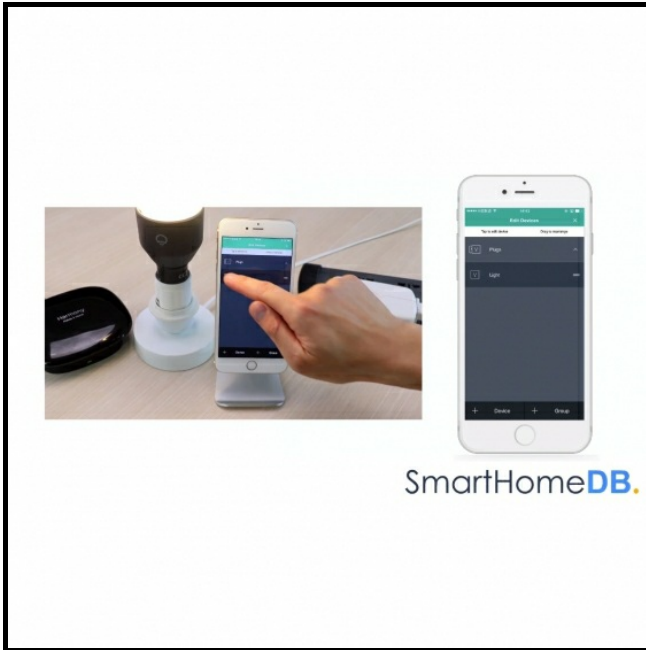



- Tap on the device which is associated with the GE Smart Switch.

## Step 4

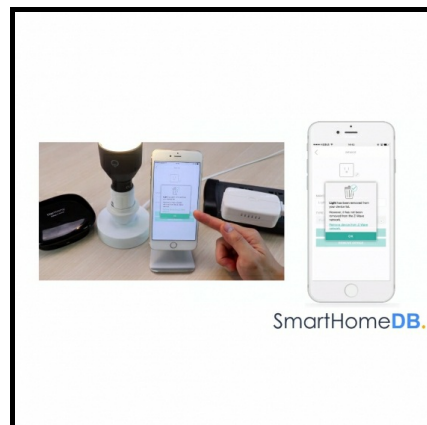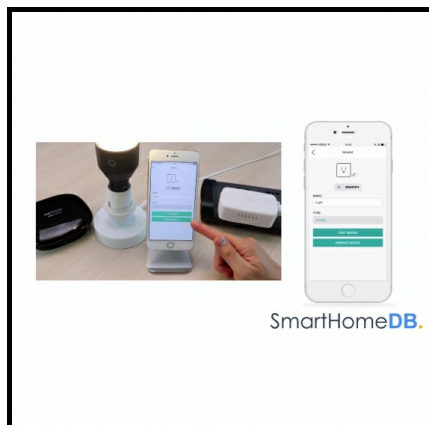



- Tap on 'Remove Device'.
- Tap on 'Yes'.
- And tap on 'Remove device from Z-Wave network'.

## Step 5

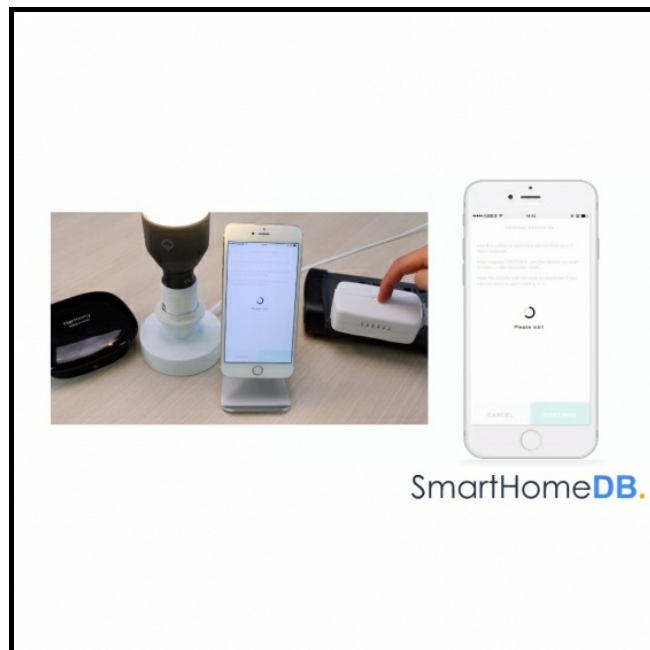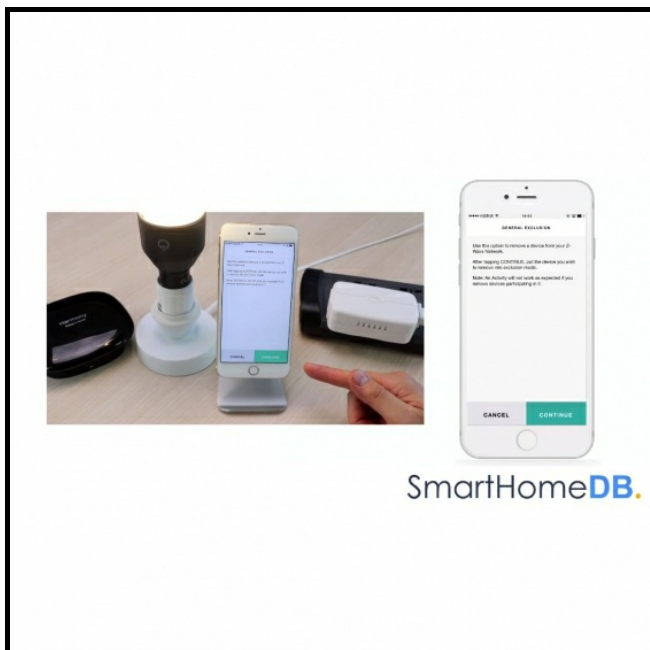

- Tap on 'Continue'.
- Proceed by pressing on the action button found at the front of the GE Smart Switch.

## Step 6

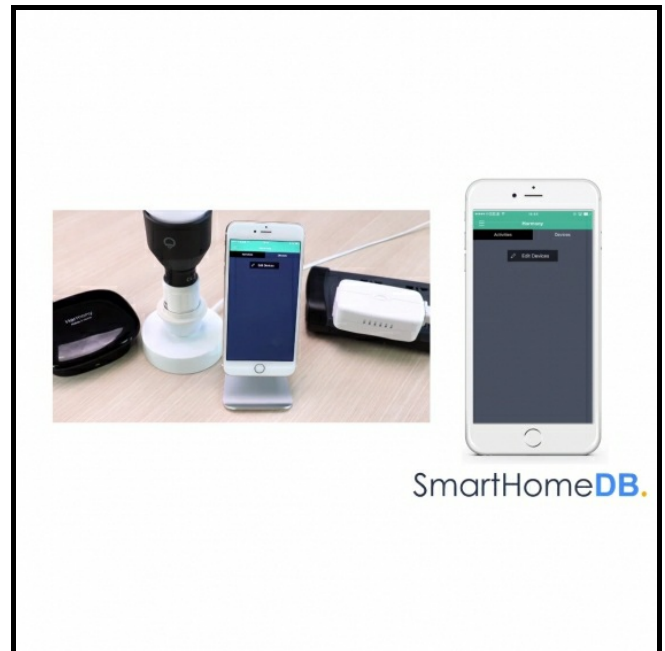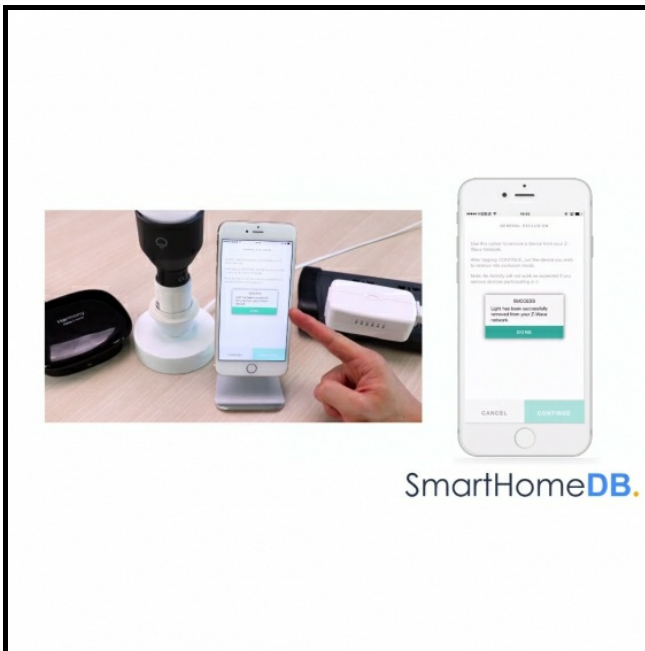

- The Harmony App will show a confirmation message that the device has been successfully removed from the Z-Wave network.
- Tap on 'Done'.
- You have hereby successfully unpaired the GE Smart Switch from the Logitech Harmony Home Hub with Extender.