

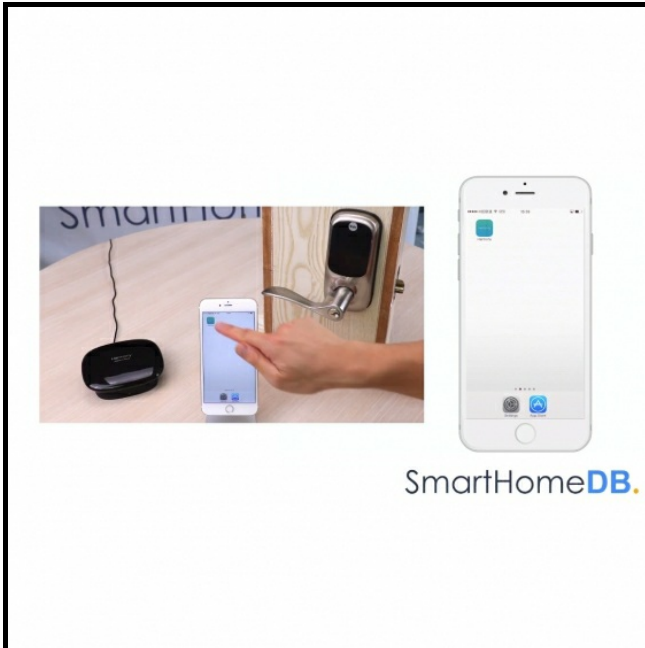
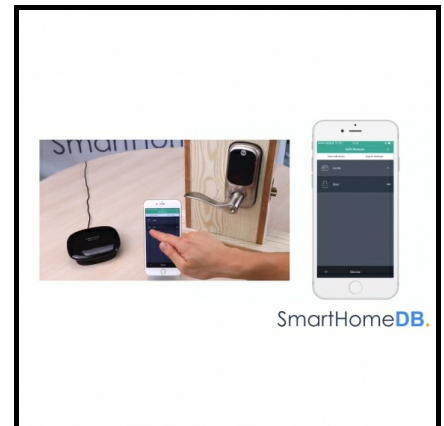


Step 1

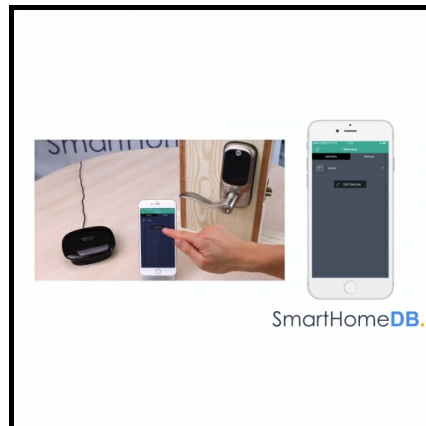





- Open the Harmony App on your mobile device.

Step 2

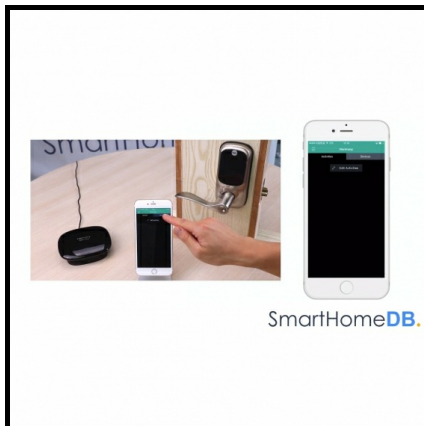



- Tap on 'Devices'.
- Tap on 'Edit Devices'.
- And tap on the device which is associated with your Yale Lock.

Step 3

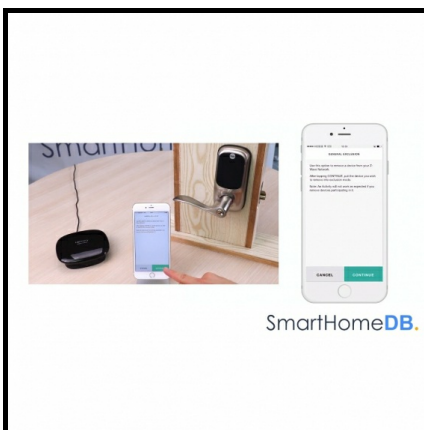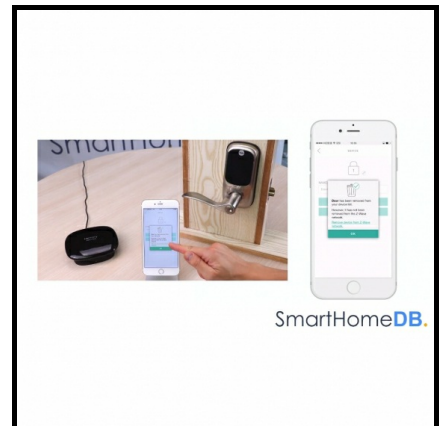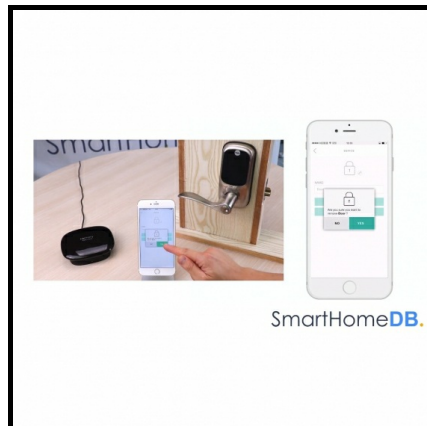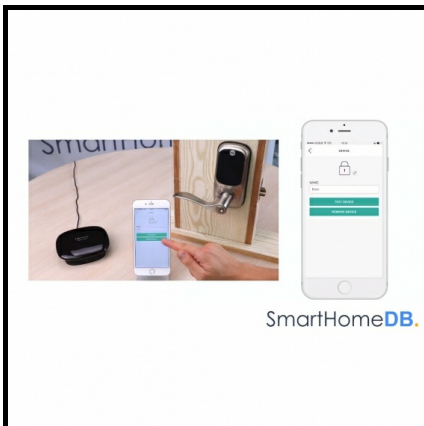



- Tap on 'Remove Device'.
- Tap on 'Yes'.
- Tap on 'Remove device from Z-Wave network'.
- And tap on 'Continue'.

Step 4

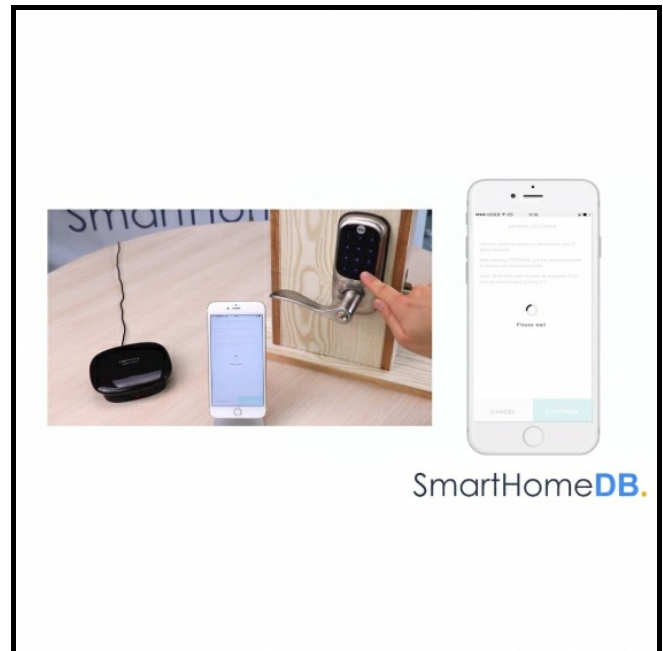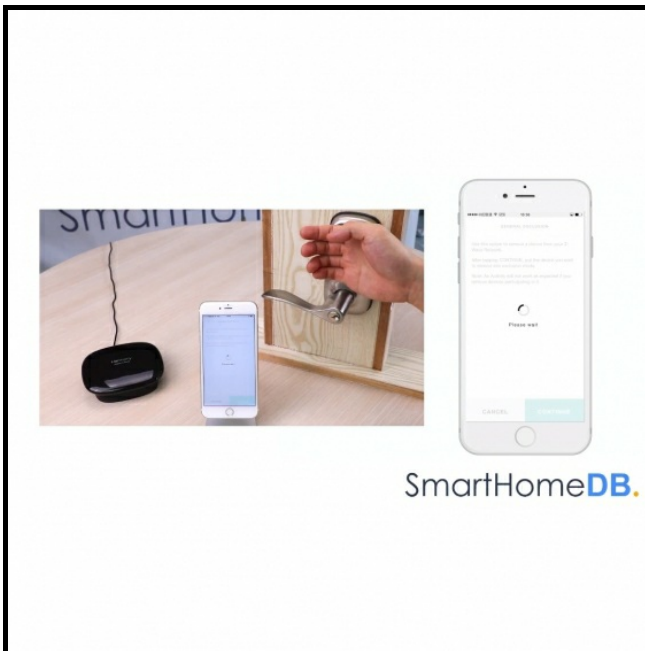

- Proceed by touching the Yale Lock screen and inserting your personal master pincode followed by the pound '#' key.
- Then press '7' followed by the pound '#' key.
- Then press '3' followed by the pound '#' key.

Step 5

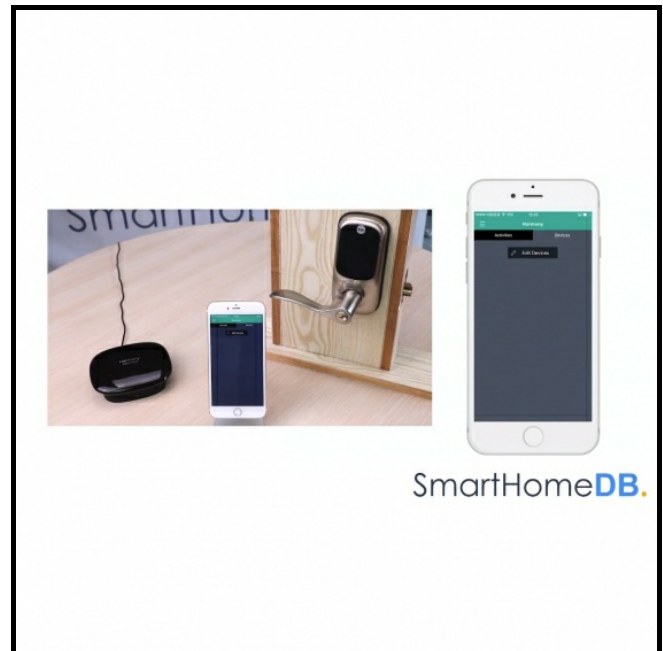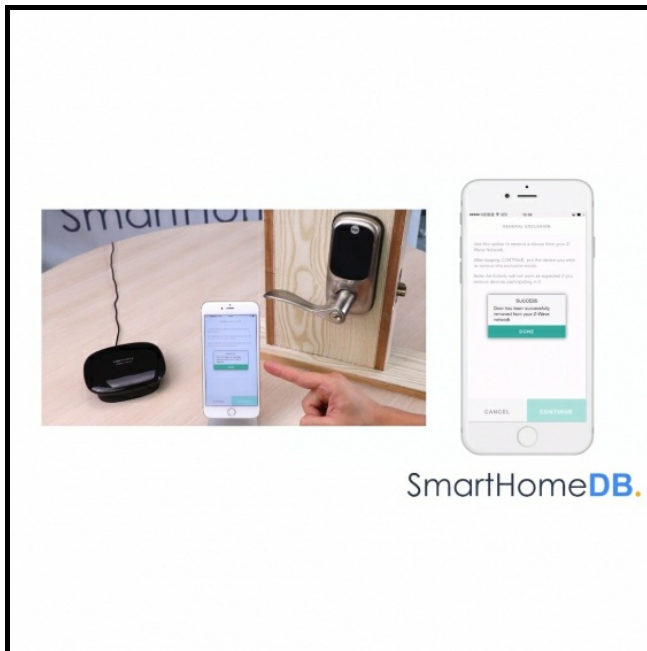

- The Harmony App will indicate that it has successfully removed your Yale Lock from your Z-Wave network.
- Tap on 'Done'.
- You have hereby successfully unpaired your Yale Lock from a Logitech Harmony Home Hub with Extender.