

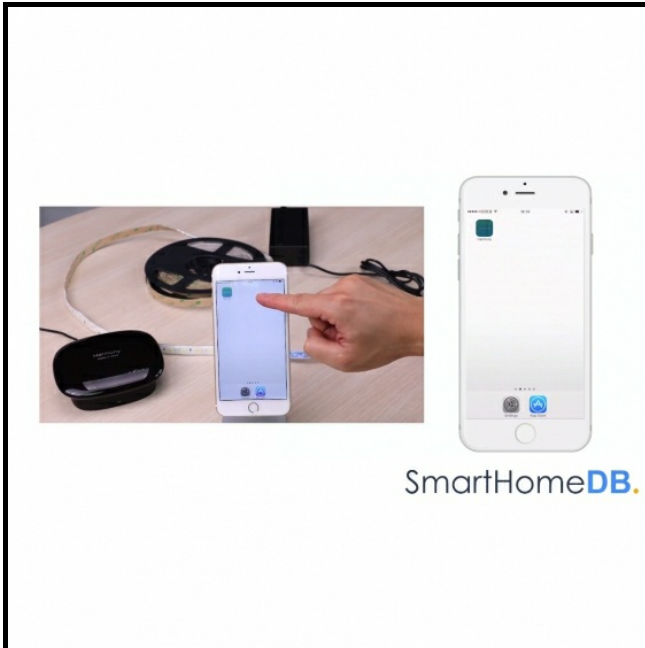
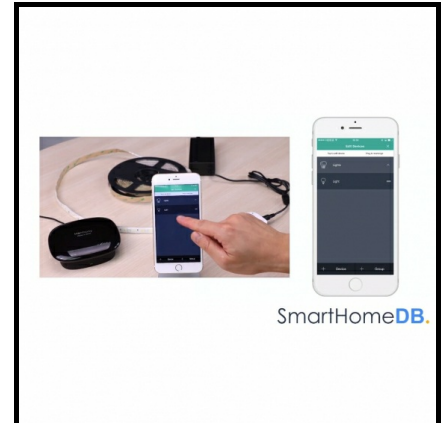


Step 1

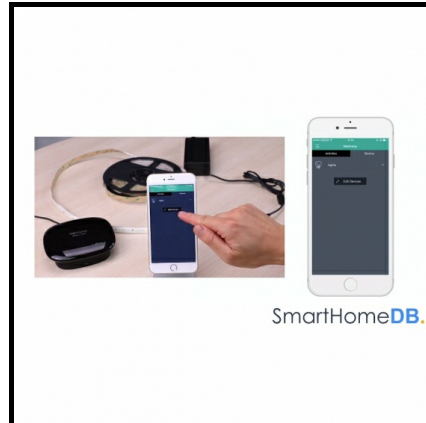





- Open the Harmony App on your mobile device.

Step 2

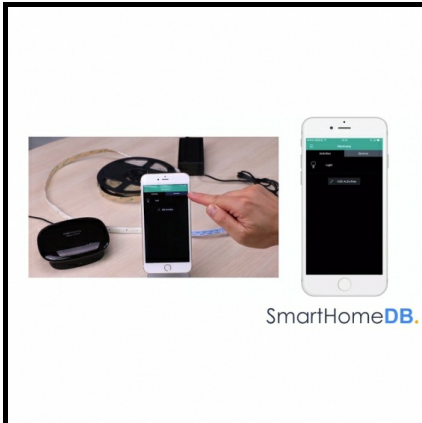



- Tap on 'Devices'.
- Tap on 'Edit Devices'.
- And tap on the device which is associated with your Aeotec LED Strip.

Step 3

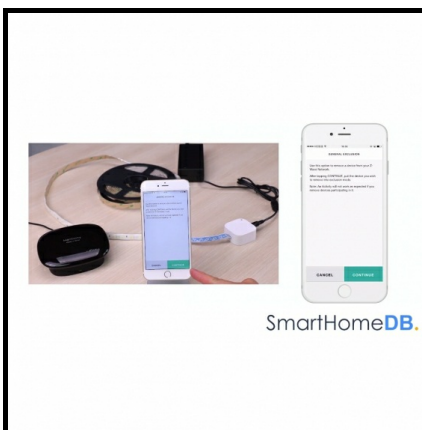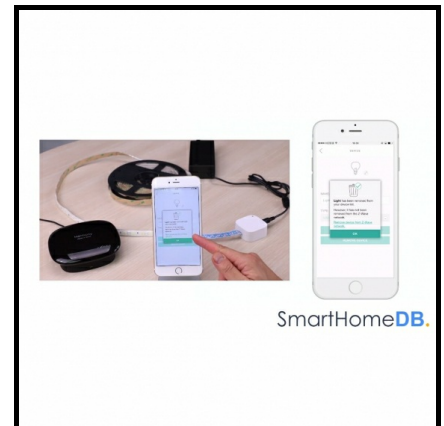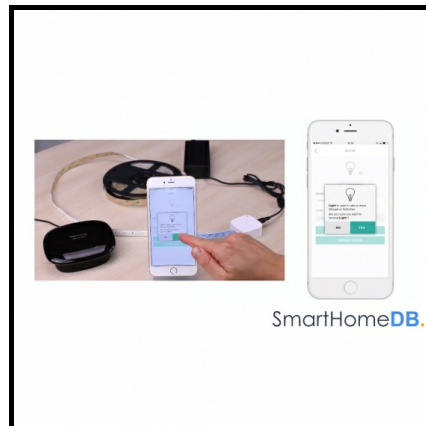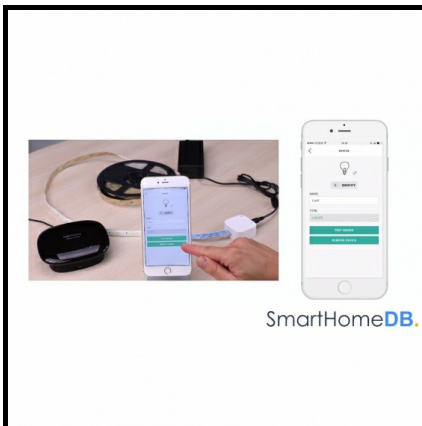



- Tap on 'Remove Device'.
- Tap on 'Yes'.
- Tap on 'Remove device from Z-Wave network'.
- And tap on 'Continue'.

Step 4

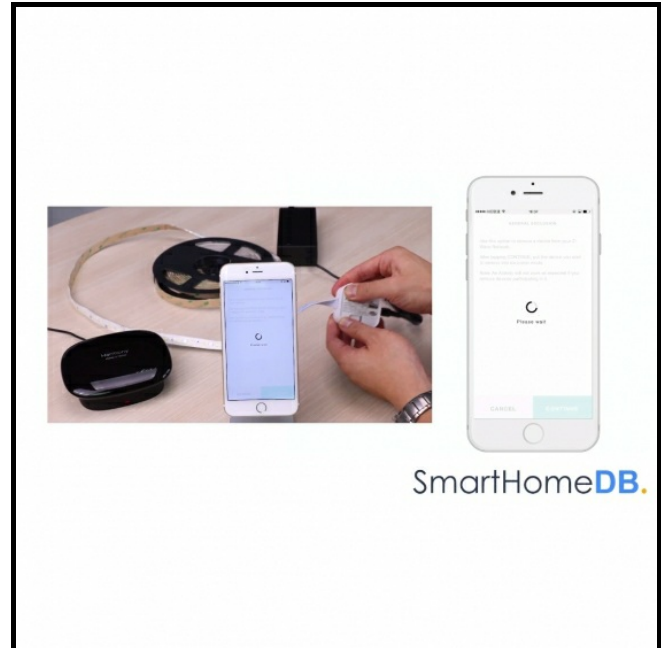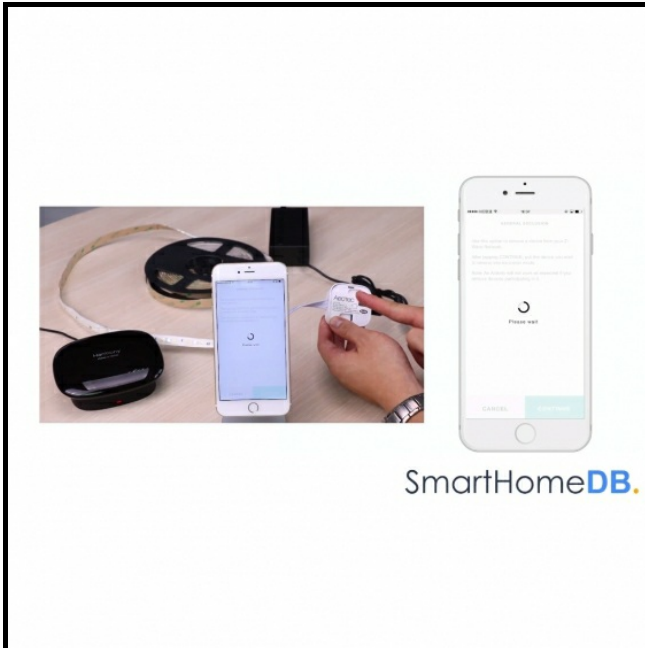

- Proceed by pressing on the action button found at the back of the Aeotec LED Strip Controller.

Step 5

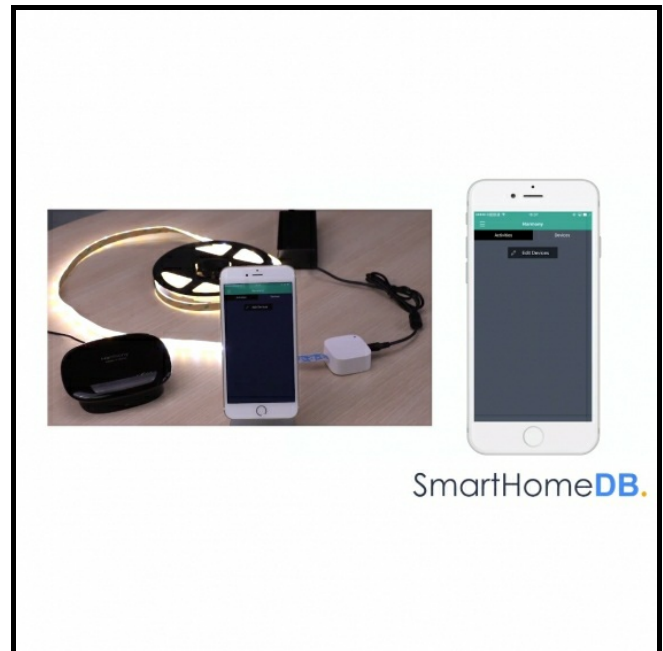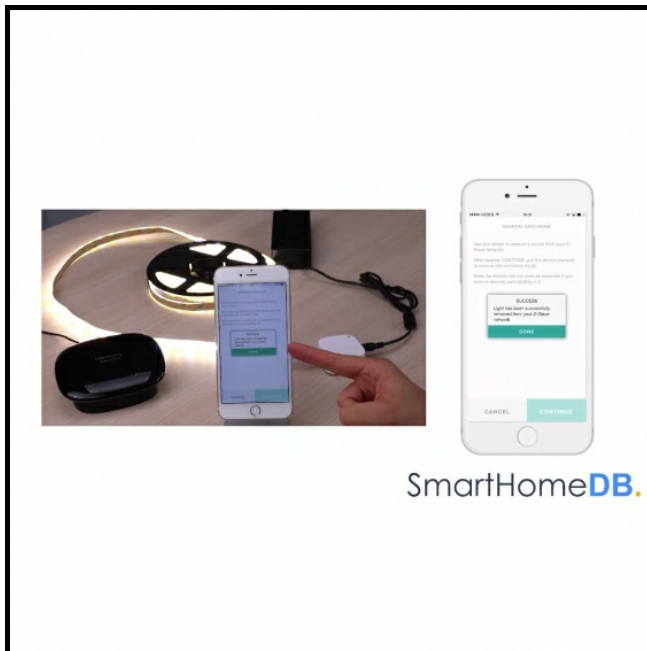

- The Harmony App will indicate that your Aeotec LED Strip has been successfully removed from your Z-Wave network.
- Tap on 'Done'.
- You have hereby successfully unpaired your Aeotec LED Strip from a Logitech Harmony Home Hub with Extender.