



Step 1

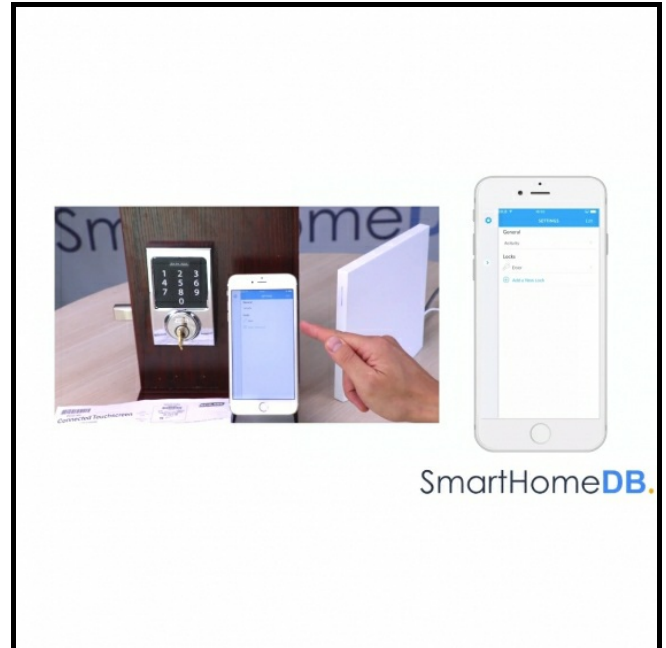


- Open the Wink App on your mobile device.

Step 2

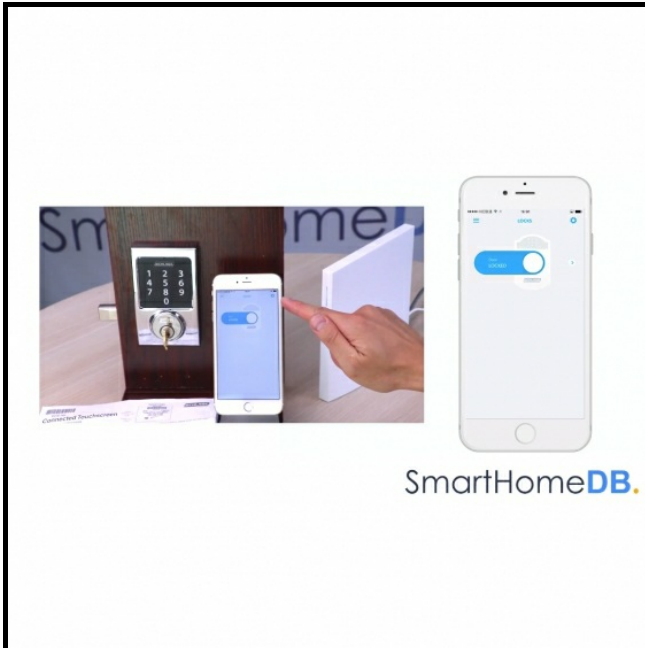

- Tap on the settings icon at the right top.
- Tap on the thing which is associated with your Schlage Lock.

Step 3

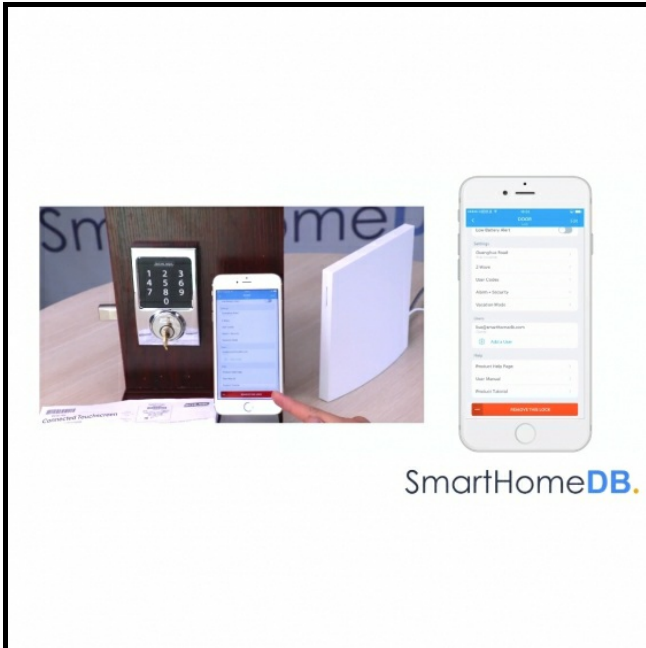



- Scroll down and tap on 'Remove this lock'.
- And tap on 'Remove'.

Step 4




- Tap on 'Next' on the following 5 screens.
- And tap on 'Disconnect now'.

Step 5

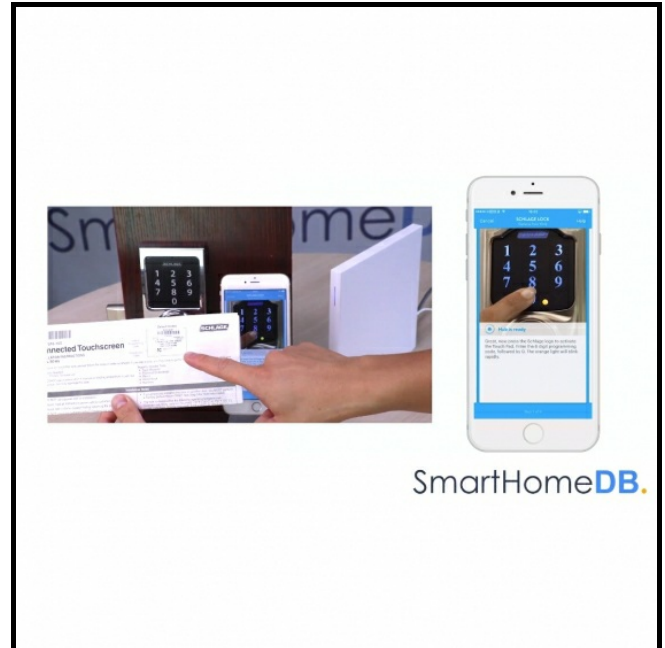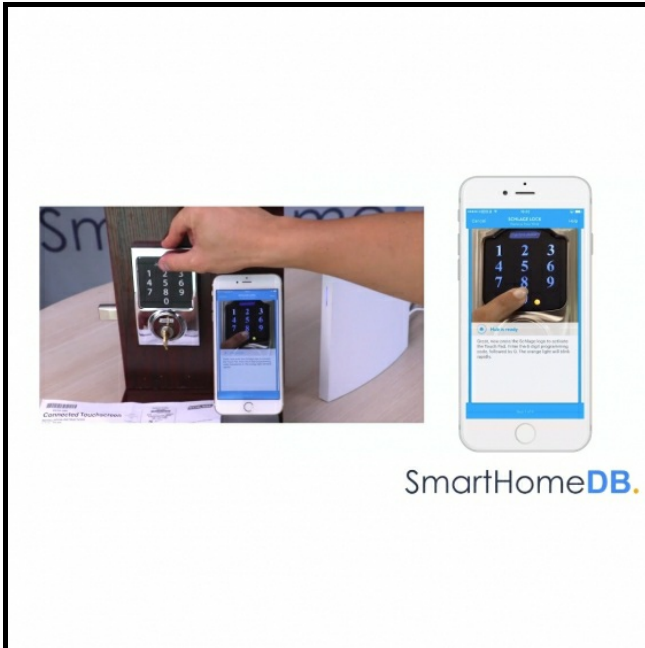

- Proceed by pressing on the 'Schlage' button at the front of the Schlage Lock followed by your unique programming code which you can find on the sticker on your instruction manual.
- Finish by tapping on '0' on the Schlage Lock.
- You will be shown a success message, a green check mark, on the Schlage Lock. Indicating that the unpairing process was successful.

Step 6

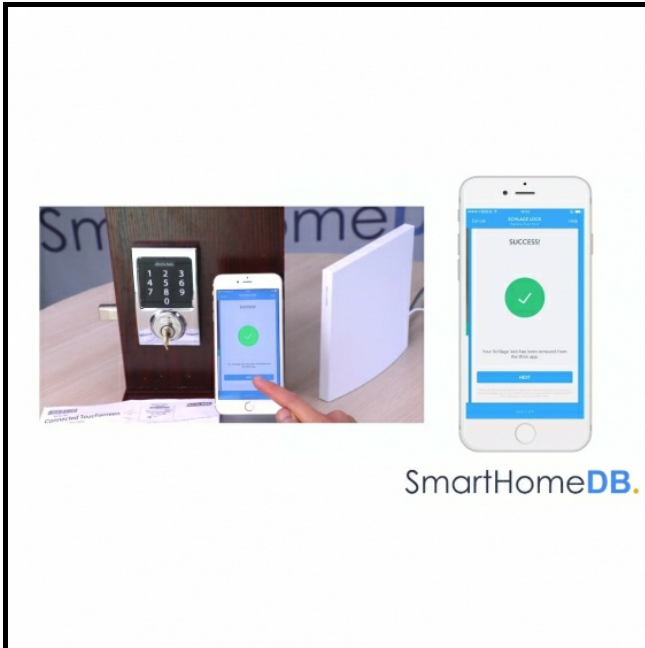

- The Wink App will indicate that the Schlage Lock has been successfully removed from Wink.
- Tap on 'Next'.
- You have hereby successfully unpaired the Schlage Lock from the Wink Hub 2.